


Service Instructions ACTUATING LEVER

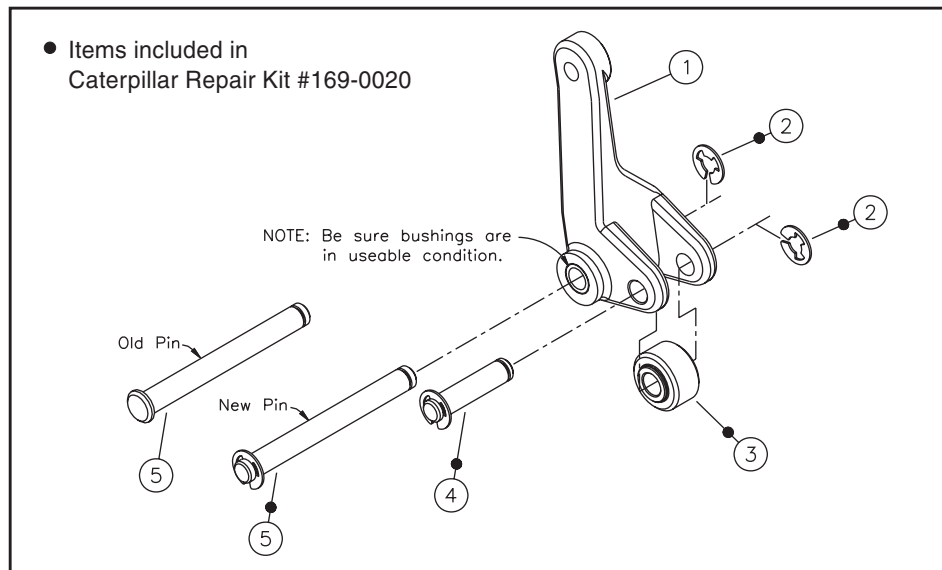

DISASSEMBLY

1. Remove clip retainer from old pin (5). Remove pin (5) from lever (1). Discard pin and clip retainer. **NOTE: Old pin (5) and new pin (5), provided in repair kit, are different. New pin (5) uses two e-rings.**
2. Remove one old e-ring (2) from old pin (4) and discard. Remove pin (4) and old cam (3) from lever (1). Discard pin and cam.


ASSEMBLY

1. Clean and inspect lever (1) to be sure it is in useable working condition.
2. Install one new e-ring (2) on new pin (4).
3. Install new pin (4), new cam (3) and new e-ring (2) on lever (1).
4. Install one new e-ring (2) on new pin (5).
5. Lubricate new pin (5) with 30 or 40 wt non-detergent oil. Reinstall lever assembly (1) on tractor and install new pin (5) and new e-ring (2).

NOTE

Be sure new e-rings are properly seated and fully engaged in their grooves.

Service Instructions ACTUATING LEVER

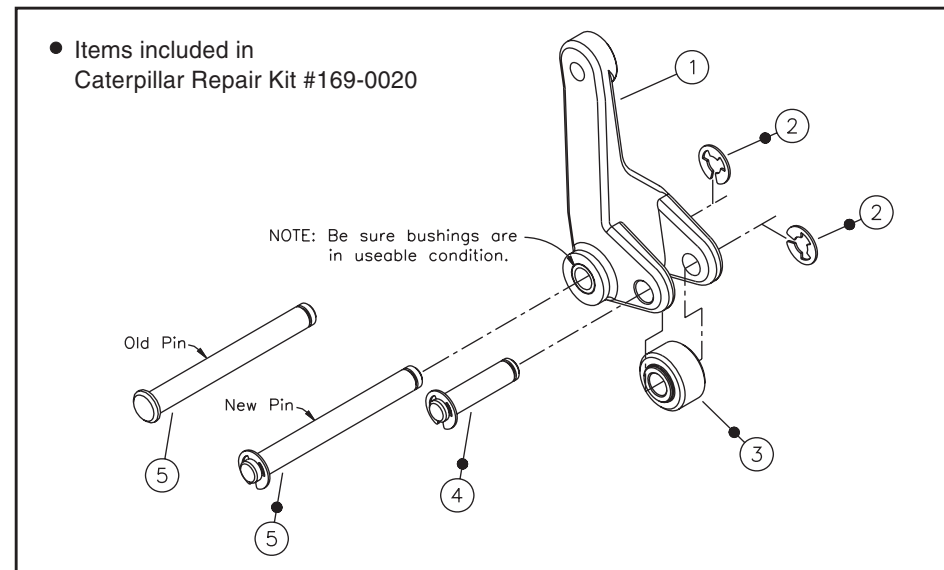

DISASSEMBLY

1. Remove clip retainer from old pin (5). Remove pin (5) from lever (1). Discard pin and clip retainer. **NOTE: Old pin (5) and new pin (5), provided in repair kit, are different. New pin (5) uses two e-rings.**
2. Remove one old e-ring (2) from old pin (4) and discard. Remove pin (4) and old cam (3) from lever (1). Discard pin and cam.

ASSEMBLY

1. Clean and inspect lever (1) to be sure it is in useable working condition.
2. Install one new e-ring (2) on new pin (4).
3. Install new pin (4), new cam (3) and new e-ring (2) on lever (1).
4. Install one new e-ring (2) on new pin (5).
5. Lubricate new pin (5) with 30 or 40 wt non-detergent oil. Reinstall lever assembly (1) on tractor and install new pin (5) and new e-ring (2).

NOTE

Be sure new e-rings are properly seated and fully engaged in their grooves.