

DUAL ACCUMULATOR CHARGING VALVE with Relief Valve

Sensor Replacement Instructions

Komatsu part number: 421 43 87691

Sensor Replacement Instructions

BE SURE THE ENTIRE PROCEDURE IS DONE USING
CONTAMINATION FREE METHODS.

(Refer to Figure 1)

1. Remove sensors (1) from housing (2) and by turning on hex flats as shown.
2. Install new sensors (1) in housing (2) by turning on hex flats as shown and torque 13.6-19.0 N·m (10-14 lb·ft).

● Items included in Sensor Kit 4071013292

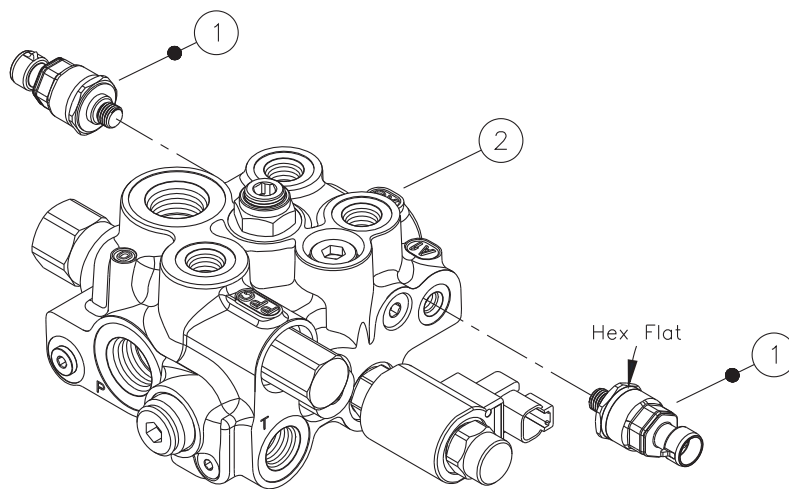


FIGURE 1