

REMOTE ACTUATOR

MICO[®]

a **WABCO** company

Service Instructions

DISASSEMBLY

1. Disconnect necessary fluid lines. Drain fluid from the actuator and remove from the machine.
2. Separate end cap (7), housing (10), and end cap (19) by removing four cap screws (1) and four washers (2). Remove spring (11).
3. Remove o-ring (9) from end cap (19). Remove o-ring (9) from end cap (7).
4. Remove end plug (3) and bleeder (8) from end cap (7). Remove retainer (6), seat (5), and o-ring (4) from end plug (3).
5. Remove piston assembly (12) from housing (10).
6. Remove retaining ring (13), stem (14), and spring (15) from piston (16).
7. Remove o-ring (18) and cup (17) from piston (16). Note direction of cup (17).

ASSEMBLY

LUBRICATE ALL COMPONENTS FROM THE REPAIR KIT WITH CLEAN TYPE FLUID USED IN THE SYSTEM.

1. Thoroughly clean housing bore and all parts in clean system fluid.
2. Install new o-ring (4), new seat (5), and new retainer (6) on end plug (3). Torque retainer (6) 12.2-20.3 N·m (9-15 lb·ft).

3. Install end plug (3) in end cap (7) and torque 54.2-61.0 N·m (40-45 lb·ft).
 4. Install new o-ring (9) on end cap (7) and new o-ring (9) on end cap (19).
 5. Install spring (15), stem (14), and retaining ring (13) in piston (16).
 6. Install new cup (17) and new o-ring (18) on piston (16). Note direction of cup (17).
 7. Install piston assembly (12) in housing (10) bore from end cap (7) side. Install spring (11) in housing (10).
 8. Use four cap screws (1) and four washers (2) to assemble end cap (7), housing (10), and end cap (19). Torque cap screws (1) 24.4- 29.8 N·m (18-22 lb·ft).
 9. Install bleeder screw (8) in end cap (7) and torque 10.8-16.3 N·m (8-12 lb·ft).
 10. Install actuator on machine. Connect fluid lines. Bleed system of air. Torque bleeder screw (8) 10.8-16.3 N·m (8-12 lb·ft). Tighten fittings if leaks occur. Make several applications to be sure actuator is working properly.
- NOTE: All fittings must be inspected for leaks and tightened if leaks occur.**

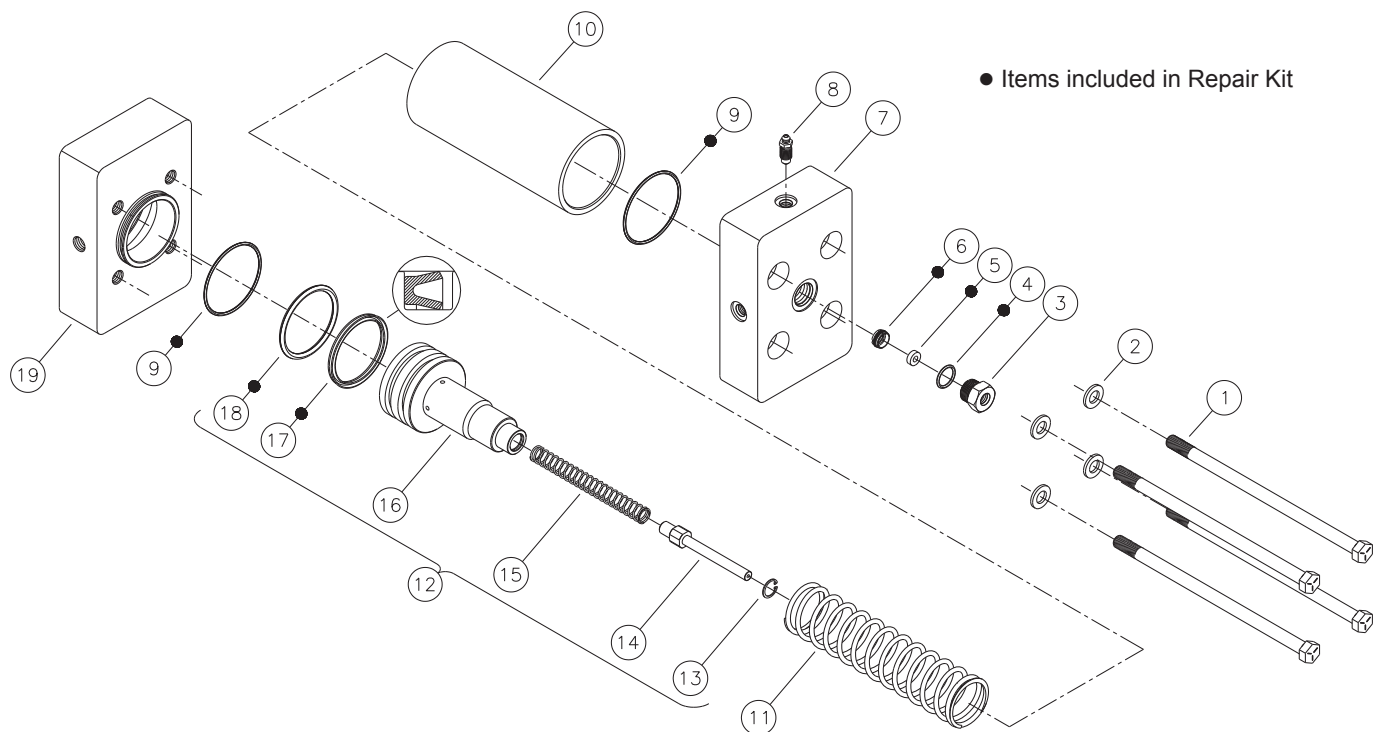


FIGURE 1

This document is intended to provide general information about MICO Products. MICO, Inc. has attempted to present accurate information about MICO Products in its catalogs, brochures, and other printed materials. MICO, Inc. is not responsible for errors, inaccuracies, or inconsistencies that may exist in any catalog, brochure, or other printed materials or any damages arising from or related to reliance on information in them. Materials and specifications for MICO Products set forth in catalogs, brochures, and other printed materials are subject to change without notice or obligation. Refer to www.mico.com for the most recent versions of our literature. If you have any questions concerning MICO Products, please contact MICO, Inc. All MICO Products and service are sold and provided subject to the MICO Warranty at www.mico.com in effect on the date of sale or supply.

MICO is a trademark and registered trademark of MICO, Inc. MICO is registered in the U.S. Patent and Trademark Office as well as in Australia, Canada, Indonesia, Japan, Peoples Republic of China, South Korea, and the European Community.



MICO, Inc.

1911 Lee Boulevard / North Mankato, MN U.S.A. 56003-2507

Tel: +1 507 625 6426 **Fax:** +1 507 625 3212