

BOOSTED MASTER CYLINDER (Master Cylinder Section)



Service Instructions

MASTER CYLINDER SECTION - Mineral Base Hydraulic Oil

POWER ASSIST SECTION - Mineral Base Hydraulic Oil

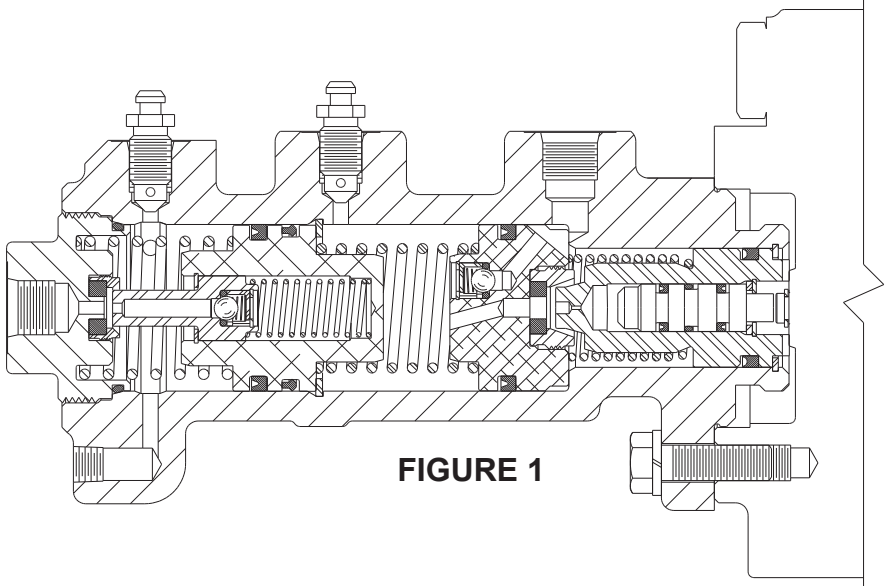


FIGURE 1

This instruction sheet services the Master Cylinder Section for these model numbers:

- 02-460-476
- 02-460-484
- 02-460-612
- 02-460-636
- 02-460-642

NOTE: If your product number is not listed, contact ZF Off-Highway Solutions Minnesota Inc. for information.

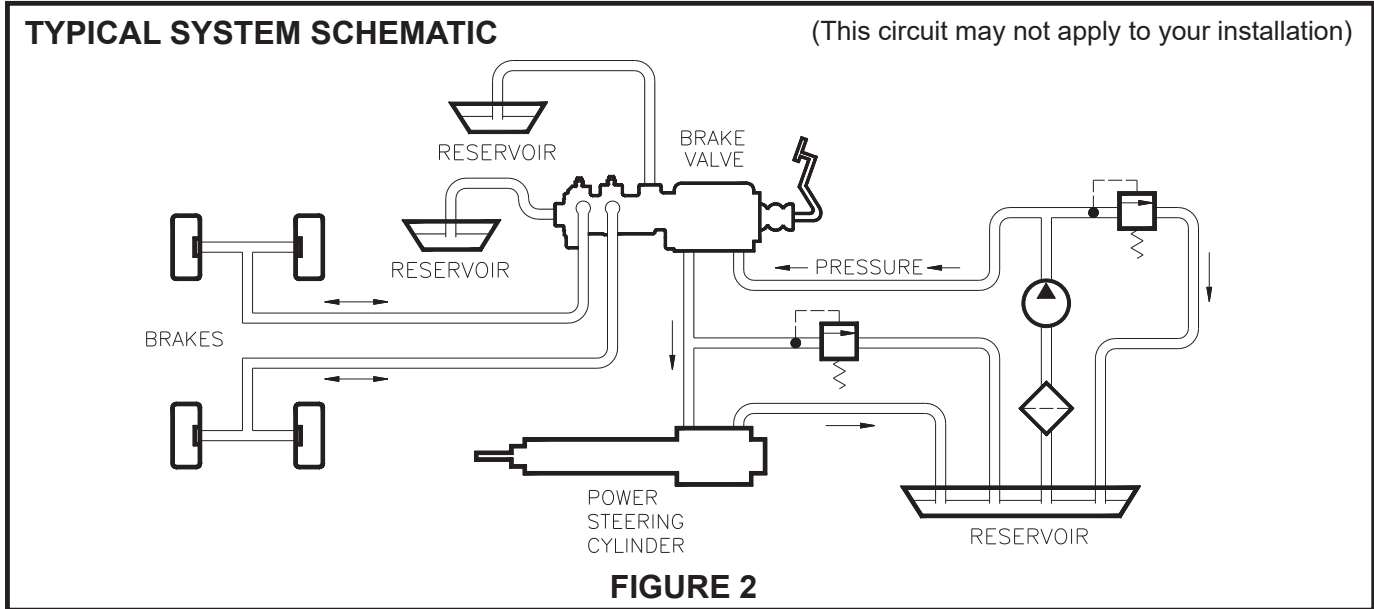


FIGURE 2

REMOVING MASTER CYLINDER FROM THE MACHINE AND SEPARATING SECTIONS

(Refer to Figures 1 and 3)

1. Remove the master cylinder assembly from the machine by disconnecting the necessary fluid lines, disconnecting the push rod, and removing the mounting bolts. Drain fluid from the assembly.
2. Separate the master cylinder section from power assist section by removing three cap screws and three lock washers.

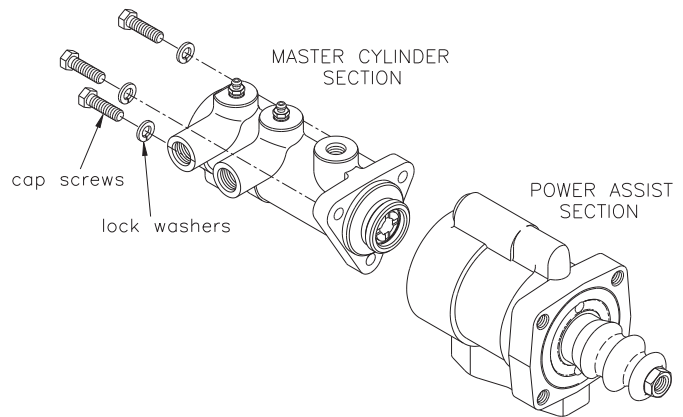


FIGURE 3

CONNECTING SECTIONS AND MOUNTING MASTER CYLINDER ON THE MACHINE

(Refer to Figures 1 and 3)

1. Attach the master cylinder section to power assist section using three cap screws and three lock washers and torque 29.8-36.6 N·m (22-27 lb·ft).
3. Install the master cylinder assembly on the machine. Connect the push rod. Connect the fluid lines. Bleed the system of air. Tighten fittings if leaks occur. Make several applications to be sure the master cylinder is working properly. **NOTE: All fittings must be inspected for leaks and tightened if leaks occur.**

DISASSEMBLY

(Refer to Figures 1 and 4)

1. Drain fluid from the unit before disassembling.
2. Remove end plug (1) from housing (23).

⚠ CAUTION

End plug (1) is under tension of spring (5).

3. Remove o-ring (4), seat (2), and retainer (3) from end plug (1).
4. Remove spring (5) and piston assembly (18) from housing (23).
5. Remove retaining ring (6), piston assembly (13), spring (14), and cups (15 & 17) from piston (16).
6. Remove retaining ring (12), cage (11), tapered spring (10), ball (9), and o-ring (8) from piston (7).
7. Remove spring (19), retaining ring (20), and piston assembly (21) from housing (23). **NOTE: Be careful not to scratch or mar housing bore.**
8. Use a wooden dowel to push piston assembly (22) out of the large bore end of housing (23).
9. Remove retaining ring (26) from flange end of housing.
10. Remove two adapters (25). **NOTE: Not all models use adapters (25) or o-rings (24).**

ASSEMBLY

(Refer to Figures 1 and 4)

Use only mineral base hydraulic oil in master cylinder Section.

LUBRICATE ALL RUBBER COMPONENTS FROM REPAIR KIT WITH CLEAN TYPE FLUID USED IN THE SYSTEM.

1. Clean all parts thoroughly before assembling.
2. Install new retaining ring (26) in flange end of housing (23).
3. Remove protective plastic cap from end of new piston assembly (22).
4. Install piston assembly (22) into large bore end of housing (23). Note direction of piston assembly (22).
5. Install new piston assembly (21) in housing (23). Note direction of piston assembly (21).
6. Install retaining ring (20) in housing (23). **NOTE: Be careful not to scratch or mar housing bore.**
7. Install spring (19) in housing.
8. Install new cups (15 & 17) on piston (16). Note direction and order of cups (15 & 17). See Figure 4a.
9. Install new o-ring (8), new ball (9), new tapered spring (10), new cage (11), and new retaining ring (12) in piston (7). Note direction of cage (11) and spring (10). See Figure 4b.
10. Install spring (14), piston assembly (13), and new retaining ring (6) in piston (16).
11. Install piston assembly (18) and spring (5) in housing (23). Note direction of piston assembly.
12. Install new seat (2) in new retainer (3) and install in end plug (1). Torque retainer 16.3-19.0 N·m (12-14 lb·ft).
13. Install new o-ring (4) on end plug (1) and install end plug in housing (23). Torque 33.9-47.5 N·m (25-35 lb·ft).
14. Install new o-rings (24) on new adapters (25) and install adapters in housing (23). Torque adapters 61.0-67.8 N·m (45-50 lb·ft). Be sure to install the correct adapters for your model. **NOTE: Not all models use adapters (25) or o-rings (24).**

● Items included in Repair Kit

* Not used on all models

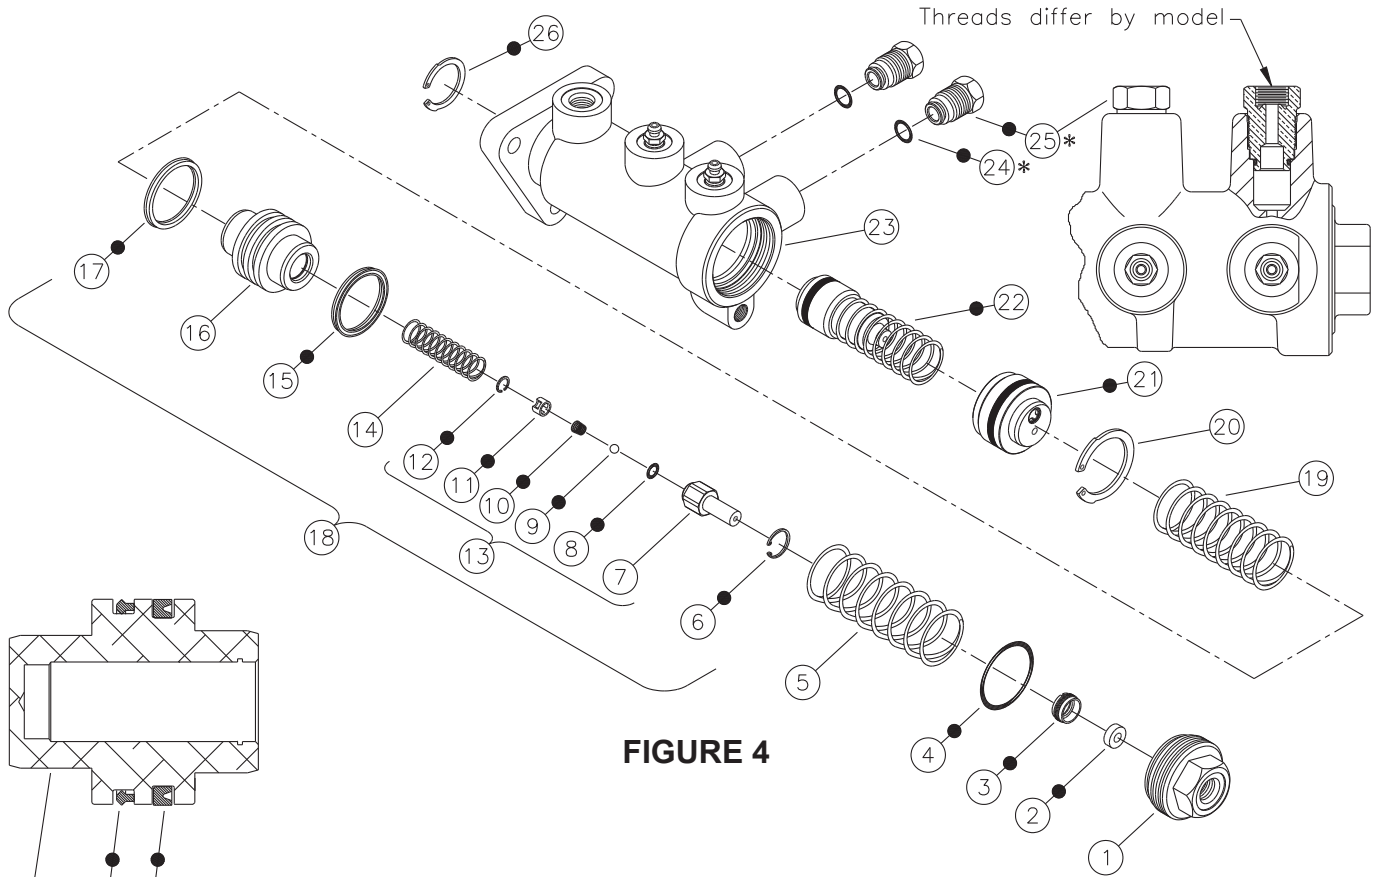


FIGURE 4

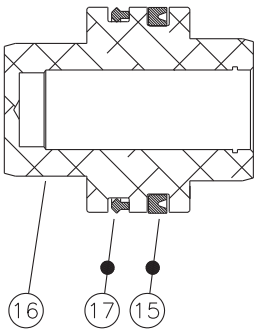


Figure 4a

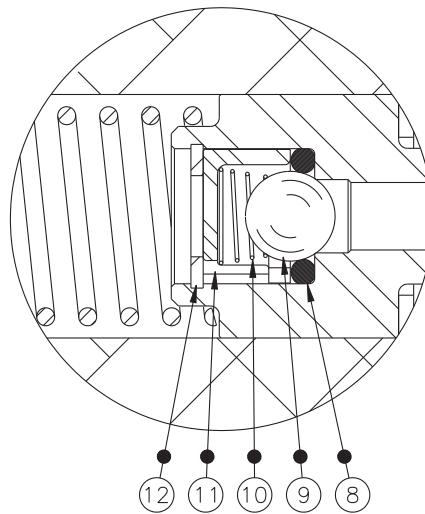


Figure 4b

BLEEDING PROCEDURES

NOTE

Use only proper fluid specified by machine manufacture. Never reuse fluid that has been drained from the system. Be sure that you maintain a high level of fluid in the reservoir during and after the entire bleeding process.

PRESSURE BLEEDING INSTRUCTIONS

(Refer to Figure 5)

1. Master cylinder must be mounted to the power assist section.
2. Connect the primary and secondary remote reservoir lines and reservoirs.
3. Be certain all fittings are tight to avoid leaking.
4. Fill secondary remote reservoir with proper fluid. Fill slowly to prevent air entrapment in reservoir lines.
5. Depress the pedal approximately two inches.
6. Connect pressure bleeder to secondary reservoir adapter. Recommended bleeding pressure is 0.69 bar (10 PSI) maximum.
NOTE: Make sure to use correct pressure bleeder for type fluid used in system.
7. Allow the pedal to return to normal position.
8. Open secondary bleeder screw on master cylinder. Close bleeder screw when air bubbles have ceased.
9. Working on the secondary line only, continue to the next bleeder screw and so on. At each point when air bubbles have ceased, close bleeder screw.
10. Disconnect pressure bleeder from the secondary reservoir adapter.
11. Fill primary remote reservoir with proper fluid. Fill slowly to prevent air entrapment in reservoir lines.
12. **DO NOT DEPRESS PEDAL.**
13. Connect pressure bleeder to primary reservoir adapter.
14. Open the primary bleeder screw on the master cylinder. Close the bleeder screw when air bubbles have ceased.
15. Working on the primary line only, continue to the next bleeder screw and so on. At each point when air bubbles have ceased, close bleeder screw.
16. Disconnect pressure bleeder from the primary reservoir adapter.
17. Open the primary and secondary bleeder screws on master cylinder. Actuate the cylinder to remove any residual air. Tighten bleeder screw before allowing pedal to return.
18. Depress the pedal several times. If pedal is spongy, check for system leaks and repeat bleeding process.

GRAVITY BLEEDING PROCEDURE

(Refer to Figure 5)

1. Master Cylinder must be securely mounted to power assist section.
2. Fill both primary and secondary reservoir with proper fluid.
3. Open both primary and secondary bleeder screws on master cylinder.
4. Close both bleeder screws when air bubbles in fluid have ceased.
5. Open downstream bleeder screws on both primary and secondary lines.
6. Close both bleeder screws when air bubbles in fluid have ceased.
7. Open downstream bleeder screws on primary and secondary lines. Actuate cylinder to remove any residual air. Tighten both bleeder screws before permitting pedal to return.
8. Depress the pedal several times. If pedal is spongy, check for system leaks and repeat bleeding process.

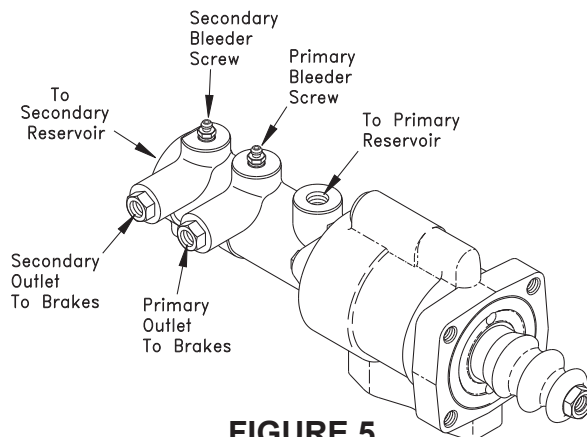


FIGURE 5

This publication is not subject to any update service. Information contained in this publication was in effect at the time the publication was approved for printing and is subject to change without notice or liability. ZF Off-Highway Solutions Minnesota Inc. reserves the right to revise the information presented or to discontinue the production of parts described at any time.

